 
 


1. Names and Parts

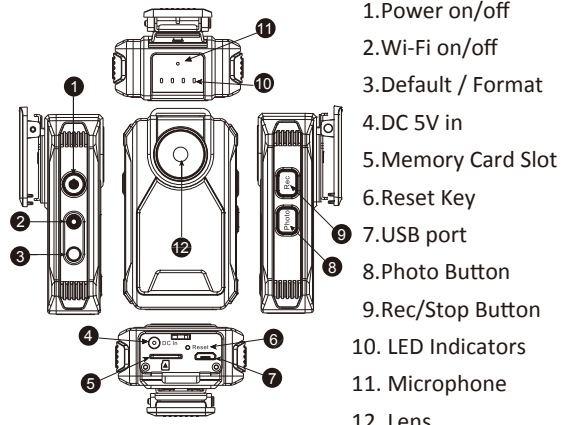 


2. Package Content

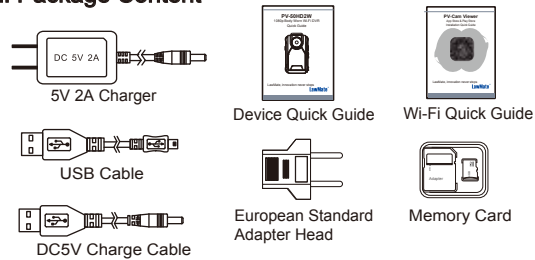

1


3. Charging the Device



1. Connect the charger plug or DC5V USB cable to the DC In Jack ④.
2. Plug the power cord of the charger or the USB cable to an AC wall outlet or other power sources. The charging starts automatically. The device can record while charging.

- Solid green LED - the device is charging.
- Green LED goes off - the device is fully charged.

 4. Retrieving Video/Photo File

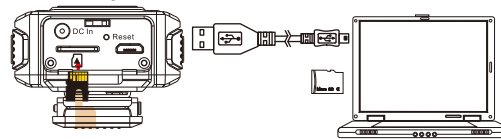

1. With the DVR powered off, plug the USB cable into the USB port ⑦ on DVR and the other end to the computer.
2. After the connection is established, turn on DVR.
3. DVR will be recognized as a "removable drive" and then user can start to download the videos to the computer.

2

5. Format the memory card

1. With gold contact facing up, insert the memory card into ⑤.
2. With device powered off, press and hold ③ and then press ① for 3 seconds to power on the device.
3. When you see the red blinking LED and blue LED goes off, the formatting is completed.

Note: To make sure the memory card can be read by the computer, please format the memory card before using it for the first time. Also, please note that formatting on computer is highly not recommended, for it might result in the failure of formatting.

6. Date and time setting (for windows system)

1. From the desktop right-click to open Notepad, create a text file named **settime.txt**
2. On the first line of the file, enter date and time information as year.month.day hours.minutes.seconds. For example, suppose the time is October 16, 2015 15:00. Then, please enter **2016.10.16 15:00:00**

Note: There should be a space left between day and hours, and the time format should be the 24-hour format.

3. Save the file to the root directory of the memory card.
 4. Insert the memory card into the slot, and power on the device. The date and time setting is now completed.
- Note:** When the date and time setting is completed. The **settime.txt** file will not be visible when you connect the device to the computer again.

3

7. Operation

 
1. Power on/off: Press ① for 3 seconds to turn on/off the device.
 - ※ Device cannot be powered on if no memory card is inserted.
 - ※ Please format the memory card before the first recording.
2. Recording: With device powered on, press ⑨ once to start or stop recording.
3. Take a photo: With no recording is on, press ⑧ once to take a picture.
4. Wi-Fi: With device powered on, press ② to turn on/off Wi-Fi.
5. Restore Default Setting: With device powered off, long press ③ for 4 seconds to restore Wi-Fi password, SSID name, turn on SSID visibility. Or long press ③ for 10 seconds to restore all the default setting.

8. LED indicators

- Solid blue LED - power is on
- Solid purple LED - recording is on
- Blinking orange LED - device searching for Wi-Fi connection.
- Solid orange LED - Wi-Fi connection successfully established.

4

PV-50HD2W 1080p Body Worn Wi-Fi DVR Quick Guide

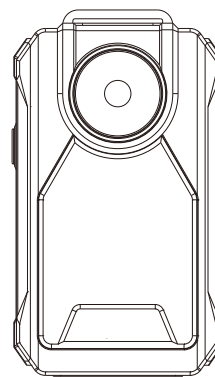

LawMate, innovation never stops

LawMate[®]

V1.0